

BT>RJ45 Voice Kit

Kit Contents

BT Double Adaptor (1)



Fig 1

BT>RJ45 Converters (2)



Fig 2

BT>RJ45 Patch Leads (2)



Fig 3

- (1) Plug BT Double Adaptor into the BT socket to be shared (Fig 1)
- (2) Plug the 2 Patch leads (Fig 3) into the Double Adaptor, The WHITE connector plugs into the Double Adaptor.
- (3) Plug the RJ45 Ends (Grey/Clear) of the patch leads into the patch panel ports that you wish to convert to Voice.
- (4) Ensure that the corresponding wall outlets have the BT>RJ45 converters plugged in (Fig 2). **DO NOT CONNECT ANY DATA LEADS (COMPUTERS, PRINTERS ETC) TO OUTLETS PATCHED FOR VOICE!**
Eg, Patch panel port 1 is patched for voice, ensure floor/wall outlet 1 has BT>RJ45 converter (Fig 2) plugged in)
- (5) Connect equipment as required.

NOTES

Telephone equipment uses what is known as a REN rating, the sum of all equipment connected MUST NOT exceed 4. Check equipment being connected to obtain the REN rating

run-IT-direct assumes no responsibility for damage caused by not adhering to these instructions

© 2002 run-IT-direct