



BT>RJ45 Voice Kit

Kit Contents

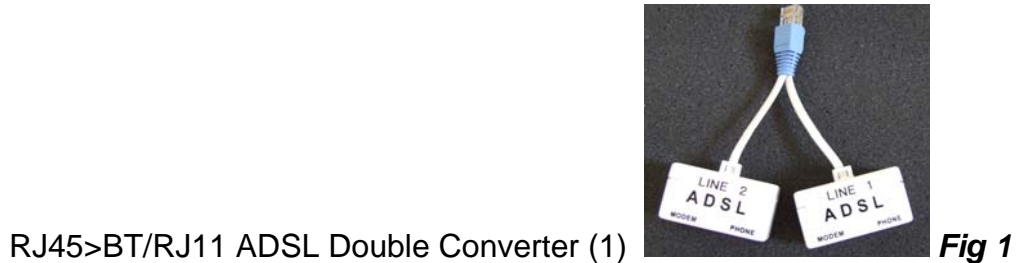

- (1) Plug RJ45>BT/RJ11 ADSL double converter into wall outlet to be converted to voice/ADSL. (Fig1)

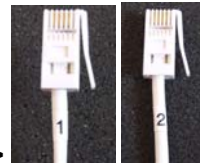

- (2) Plug the patch lead(Fig 2)BT plugs into the BT sockets >
- (3) Plug the RJ45 end (Blue) of the patch lead into the patch panel port/RJ45 socket that you wish to convert to voice/ADSL.
- (4) Ensure that the corresponding wall outlet has the RJ45>BT/RJ11 ADSL double converter plugged in (Fig 1). **DO NOT CONNECT ANY DATA LEADS (COMPUTERS, PRINTERS ETC) TO OUTLETS PATCHED FOR VOICE!**

Eg, Patch panel port 1 is patched for voice, ensure floor/wall outlet port 1 has RJ45>BT/RJ11 ADSL double converter (Fig 1) plugged in)



- (5) Connect equipment as required to the BT/ADSL sockets >

NOTES

Telephone equipment uses what is known as a REN rating, the sum of all equipment connected MUST NOT exceed 4. Check equipment being connected to obtain the REN rating

run-IT-direct assumes no responsibility for damage caused by not adhering to these instructions