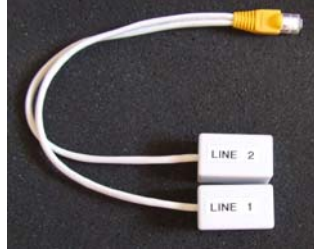


## BT>RJ45 Voice Kit

### Kit Contents

RJ45>BT Double Converter (1)




**Fig 1**

RJ45>BT Double Patch Lead (1)



**Fig 2**

(1) Plug RJ45>BT double converter into wall outlet to be converted to voice (Fig1)

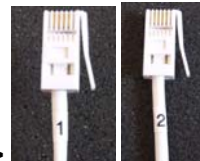


(2) Plug the patch lead(Fig 2)BT plugs into the BT sockets >

(3) Plug the RJ45 end (Yellow) of the patch lead into the patch panel port/RJ45 socket that you wish to convert to voice.

(4) Ensure that the corresponding wall outlet has the RJ45>BT double converter plugged in (Fig 1). **DO NOT CONNECT ANY DATA LEADS (COMPUTERS, PRINTERS ETC) TO OUTLETS PATCHED FOR VOICE!**

Eg, Patch panel port 1 is patched for voice, ensure floor/wall outlet port 1 has RJ45>BT double converter (Fig 1) plugged in)

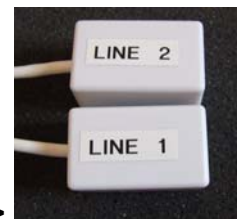

(5) Connect equipment as required to the BT sockets >

#### NOTES

Telephone equipment uses what is known as a REN rating, the sum of all equipment connected MUST NOT exceed 4. Check equipment being connected to obtain the REN rating

run-IT-direct assumes no responsibility for damage caused by not adhering to these instructions