

BT>RJ45 Voice Kit

Kit Contents

RJ45>BT/RJ11 Microfilter(1)



Fig 1

BT>RJ45 Patch Lead (1)



Fig 2

- (1) Plug RJ45>BT/RJ11 Microfilter into wall outlet to be converted to voice/ADSL (Fig1)
- (2) Plug the Patch lead (Fig 2) into the BT socket (ADSL Enabled!), the WHITE connector plugs into the BT socket.
- (3) Plug the RJ45 End (Grey/Clear) of the patch lead into the patch panel port/RJ45 socket that you wish to convert to Voice.
- (4) Ensure that the corresponding wall outlet has the RJ45>BT/RJ11 converter plugged in (Fig 1). **DO NOT CONNECT ANY DATA LEADS (COMPUTERS, PRINTERS ETC) TO OUTLETS PATCHED FOR VOICE/ADSL!**

Eg, Patch panel port 1 is patched for voice/ADSL, ensure floor/wall outlet port 1 has RJ45>BT/RJ11 Microfilter (Fig 1) plugged in)

- (5) Connect equipment as required.

NOTES

Telephone equipment uses what is known as a REN rating, the sum of all equipment connected MUST NOT exceed 4. Check equipment being connected to obtain the REN rating

run-IT-direct assumes no responsibility for damage caused by not adhering to these instructions