

BT>RJ45 Voice Kit-BT Micro Version

Kit Contents

BT>RJ45 Converter (4)




Fig 1

BT>RJ45 Patch Lead (4)



Fig 2

- (1) Plug BT>RJ45 converter into wall outlet to be converted to voice (Fig1)
- (2) Plug the patch lead (Fig 2) into the BT socket on the BT Micro of the extension you wish to patch, the WHITE connector plugs into the BT Micro

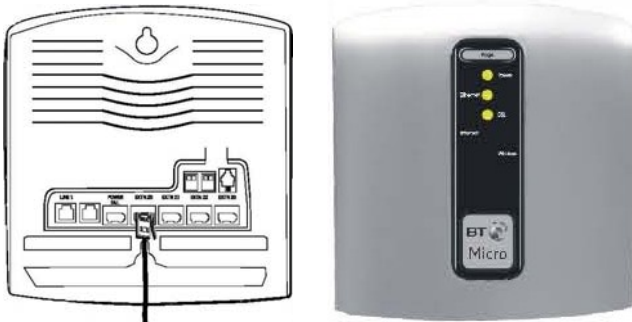

- (3) Plug the RJ45 end (Grey/Clear) of the patch lead into the patch panel port/RJ45 socket that you wish to convert to Voice.
- (4) Ensure that the corresponding wall outlet has the BT>RJ45 converter plugged in (Fig 1).
DO NOT CONNECT ANY DATA LEADS (COMPUTERS, PRINTERS ETC) TO OUTLETS PATCHED FOR VOICE!
Eg, Patch panel port 1 is patched for voice, ensure floor/wall outlet port 1 has BT>RJ45 converter (Fig 1) plugged in
- (5) Connect equipment as required, you can use either a standard telephone or a "V8

Feature Phone".



run-IT-direct assumes no responsibility for damage caused by not adhering to these instructions